













- Range (240-volt circuit)
- Dryer (240-volt circuit)
- Kitchen and dining room, 20 amp
- Kitchen and dining room, 20 amp
- Washing machine, 20 amp
- Dishwasher, 20 amp
- Bath and hall, 15 amp
- Bedroom #1, 15 amp
- Bedroom #2, 15 amp
- Living room, 15 amp
- Living room, 15 amp
- Garage, 20 amp

- ⊗ Light fixture
- ⊖ Duplex receptacle
- ⊖ Duplex receptacle, half controlled by switch
- S Single-pole switch
- S₃ Three-way switch
- ⊖ R Range outlet
- ⊖ D Dryer outlet
- ▲ Special outlet
- Doorbell
- ⊖ WPD Weatherproof receptacle
- Switch wiring